SAMSUNG

Owner's Instructions

WT8202EG
WT8204EG
WT8205EG
WT8207AG
WT8504EG
WT8505EG
WT8507AG
WT9204EG
WT9205EG
WT9207AG

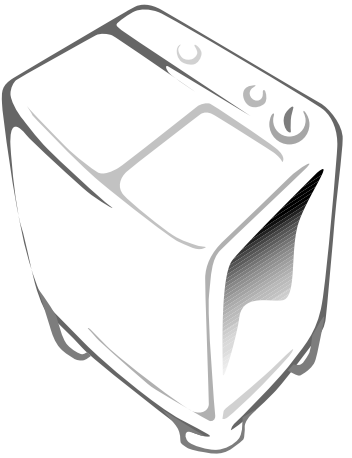

Before operating the unit, please read this manual throughly, and retain for future reference.

FEATURES 1
SAFETY INSTRUCTIONS 2
- CAUTIONS 2
- PRECAUTIONS WHEN OPERATING 2

DESCRIPTION OF PARTS 3
CONTROL PANEL 4
INSTALLATION 5
- ENVIRONMENT 5
- CONNECTING THE DRAIN HOSE 5

CLEANING THE MACHINE 5
- HOW TO CLEAN THE FILTER 5

WASHING PROCEDURE 6
- TO WASH 6
- SPIN DRY 6
- RINSING 7
- OVER FLOW RINSE 7
- ADDITIONAL RINSE 7

LAUNDRY GUIDE 8
MAINTENANCE 8
TROUBLE SHOOTING 9
SPECIFICATION 9

Register your product at
www.samsung.com/global/register

CODE NO. : DC68-01783E

FEATURES

- **The Silver Wash System** option
  - This is a wash control system that enables to protect human skin from harmful bacteria through the antibiotic coating by SILVER WASH, and to realize a pleasant, healthy sanitization. This system also prevents propagation of bacteria through antibiotic coating on the wash cloth.

    Test Method :
    KS K 0693 Test Method for antibacterial textiles.

- **Air Turbo Drying System** option
  - Air Turbo technology spins hard and fast so you can spend less time drying.
  - Time Saving AIR TURBO saves your time, ensuring your clothes are dried 30%-40% faster than line drying alone. Especially during the rainy season and in high-humid weather, laundry that once took days to drip-dry, such as heavy jeans, bulky sweaters, and thick blankets are dried more rapidly.
  - Easy-to-iron AIR TURBO is perfect for delicates and clothes made of synthetic fabrics. No more hanging and waiting. Simply iron straight-out-of-the washer, since AIR TURBO eliminates just enough moisture to keep clothes adequately damp for ironing.

- **Transparent Window**
  - This Transparent Window is the new concept to solve the curiosity of users to see inside of washing machine while operation.
    While operation, the laundry progress inside of washing machine can be checked by looking through the transparent window.

- **Double Storm Pulsator** option

  By rotating an inner and outer blade at different speeds, two powerful currents of water created that ensure that clothes get clean with less damage than a conventional washing machine. The turnado like water currents enhance both washing and rinsing power while reducing unnecessary fractions and in creating both the durability and reliability of your fine fabrics by preventing the laundry from getting twisted and knotted.

SAFETY INSTRUCTIONS

- Must follow the cautions and precautions for safety intend to prevent unpredictable danger and damage by helping the proper use in safety.

CAUTIONS

- **Be sure that the washer is grounded.**
  To avoid electrical shock, use a metal pipe for the ground connection. But, don't ground the washer with gas pipes or telephone lines to avoid to dangers of explosion or lightening strike.



- **Do not put your hands into the spin dryer basket when it is spinning.**
  Your fingers can be caught by spinning laundry and damaged.

- **Never allow children to operate or play with the washer.**
  Children playing with the washer may accidentally fall into the washing tub.

- **Disconnect the power cord from the power supply when not in use.**
- **Ventilation opening must not be obstructed by carpeting when the washing machine is installed on a carpeted floor.**
- **If the supply cord of this appliance is damaged, it must only be replaced by a repair shop appointed by the manufacturer, because special purpose tools are required.**
- **To avoid overfilling and damages this appliance must be filled with the operator present using a moderate water supply pressure only.**
- **For washing machines with ventilation openings in the base, that a carpet must not obstruct the openings.**
- **Do not use adapter or extension cord to supply power to your washer.**

PRECAUTIONS WHEN OPERATING

- **Don't use excessively hot water. (50°C or more)**
  Plastic parts may be deformed or damaged.
  Also, clothing may be deformed or decolored.
- **Before washing, check all pockets.**
  If nails or pins remain in pockets, they may damage the washer or clothes.
- **Close the water tap a little if the water pressure is too high.**
- **To avoid water splashes, close the wash tub lid.**
- **Never splash water on the control panel.**
- Take out personal belongings from pockets.
  Caution
  Check the pockets! Hairpins and coins cause damages to clothes and wasing machine. They make noise and problems to the machine. Must check the pocket.



- **Be sure to cover with the inner cover on laundry before spinning.**
  This prevents laundry from being tossed out and damaged.



- **Be sure lay the drain hose(A) down.**



DESCRIPTION OF PARTS

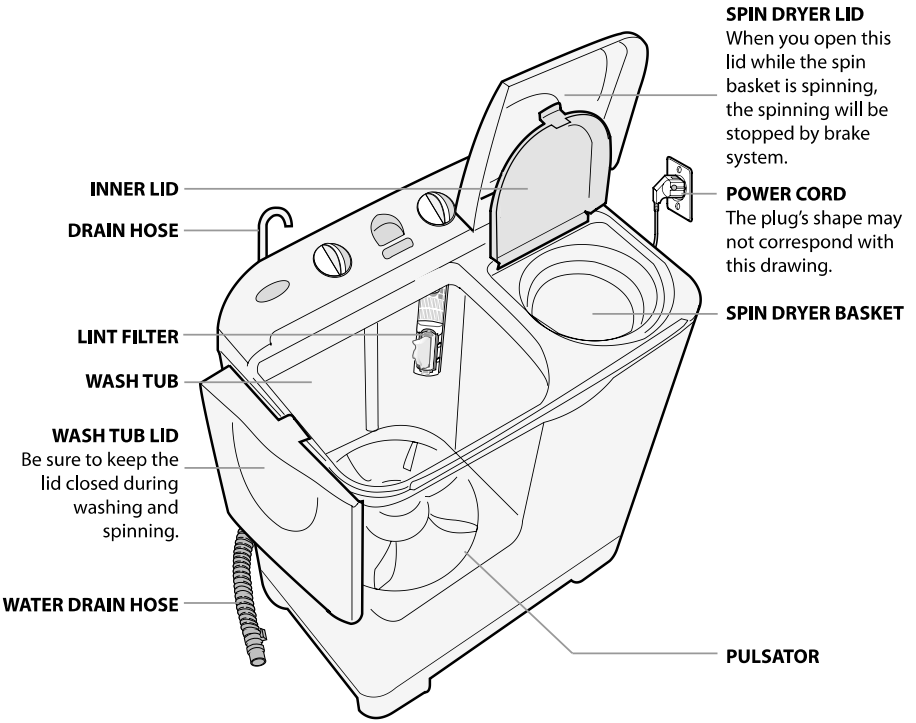
SPIN DRYER LID
When you open this lid while the spin basket is spinning, the spinning will be stopped by brake system.
INNER LID
POWER CORD
The plug's shape may not correspond with this drawing.
DRAIN HOSE
SPIN DRYER BASKET
LINT FILTER
WASH TUB
WASH TUB LID
Be sure to keep the lid closed during washing and spinning.
WATER DRAIN HOSE
PULSATOR

(Please do not match this figure with model because this may not be similar with your model).

CONTROL PANEL

1. **WASH SELECTOR**
   This is used to select wash action.

2. **WASH TIMER**
   This is used to set the wash time,
   1-15 minutes option
   1-35 minutes option
   1-42 minutes option

3. **CYCLE SELECTOR /DRAIN SELECTOR**
   This is used to select the Washing / Rinsing or draining.

4. **SPIN DRY TIMER**
   This is used to set the spin time,
   1-5 minutes option
   1-10 minutes option

5. **WATER SELECTOR**
   During washing, WATER SELECTOR KNOB should be selected to wash. During spin rinsing, WATER SELECTOR KNOB should be selected to spin.

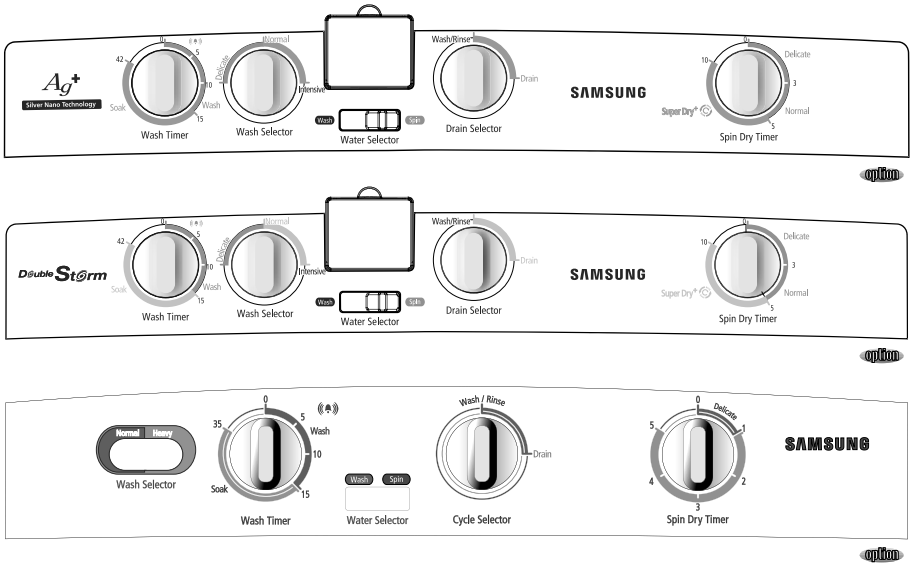

INSTALLATION

ENVIRONMENT

Leave some space

Space at last 15cm between the washer and the wall.

Place the washer on a sturdy flat surface.

If the washer is placed on an uneven or weak surface, noise or vibration may be occured. (Allowable is 2°)

Never install the washer near water.

Do not place the washer in steamy rooms or where the washer is directly exposed to rain. Moisture may destroy the electrical insulation and cause an electrical shock hazard.

Avoid direct sunlight or heating devices.

As plastic and electrical components are affected by direct heat, never place the washer near heaters, boilers,etc.
Do not place under direct sunlight.

CONNECTING THE DRAIN HOSE option

Insert the drain hose(a) and push it tighly to be connected as arrow direction.

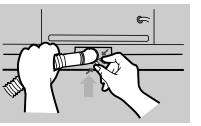

- Push it with force further to the bottom of the drain outlet.
- Check the drain hose for not getting apart from the outlet by drawing it.

CLEANING THE MACHINE

CLEANING THE LINT FILTER

If the dregs are filled up in the lint filter after finishing the wash, push down(1) and pull it out(2) as shown in figure.
Remove the collected lint and rinse the filter net.

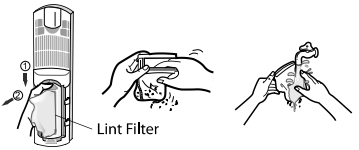

OVERFLOW FILTER

Pull the upper side of the overflow filter with two fingers into the hole 'A' in the direction of arrow as shown in the figure.



CLEANING THE WASH TUB

- Wipe off strains on the cabinet and operation panel with soft cloth.
  Do not use benzene, thinners, cleanser, or wax, nor scrub the washer with a brush. Painted surfaces or plastic parts will be damaged.
- When cleaning don't spray water directly to the parts of the washer. It may make its life span shorter. Also an electric shock or fire may take place.

WASHING PROCEDURE

TO WASH

1. **Before starting washing, check the following;**
   - Connect the water supply hose and open the water tap.
   - Connect the power cord to the power supply outlet.
   - Lay the drain hose(A) down toward a sinkhole.



2. **Set the WASH SELECTOR KNOB to the desired mode.**

Wash Selector option

Wash Selector option

3. **Set the CYCLE SELECTOR / DRAIN SELECTOR KNOB to 'WASH·RINSE'.**

Cycle Selector / Drain Selector

4. **Set the WATER SELECTOR KNOB to WASH .**



5. **Load laundry in the wash tub.**

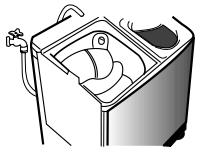

6. **Fill water in the wash tub and add the detergent.**

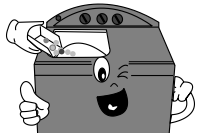

7. **Set the WASH TIMER.**



Wash Timer option



Wash Timer option

Wash Timer option

option Set the Wash Timer 1-15 min.

option Set the Wash Timer 1-35 min.
(Set the Wash Timer to a point between 15 to 35 mins for soak function).

SOAK FUNCTION option

If the WASH TIMER is set to a point between "15" to "35", the washing machine start the wash (15 min), after the soak (2-20 min) is completed.
The Soak function (20 min) repeats the cycle that is 1.5-2.0 min. Turning and the 5 min Resting (3 times).

option Set the Wash Timer 1-42 min.
(Set the Wash Timer to a point between 15 to 42 mins for soak function).

SOAK FUNCTION option

If the WASH TIMER is set to a point between "15" to "42", the washing machine start the wash (15 min), after the soak (26.5 min) is completed.
The Soak function (26.5 min) repeats the cycle that is 1.5-2.0 min on washing. Turning and the 5 min Resting (4 times).

8. **After washing,set the CYCLE SELECTOR/ DRAIN SELECTOR KNOB to 'DRAIN' for drain.**



Cycle Selector / Drain Selector

SPIN DRY

1. **Transfer the clothes into the spin basket and arrange the clothes evenly.**

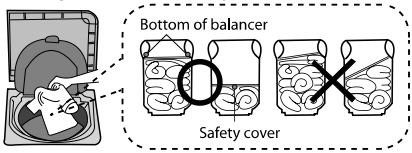

2. **Be sure to attach the safety cover and close the inner lid.**

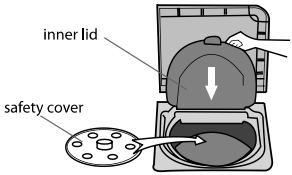

3. **Close the spin dryer lid.**

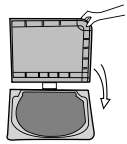

4. **Set the SPIN DRY TIMER**

1-5 min Spin Dry Timer

Spin Dry Timer

1-10 min Spin Dry Timer



Spin Dry Timer

5. **Incomplete spining. (Severe vibration or unbalance) See "When you load ..."on page 8.**

RINSING

1. **Set the CYCLE SELECTOR / DRAIN SELECTOR KNOB to 'WASH RINSE'.**



2. **Supply the proper amount of water as not to overflow the top of the washing tub.**



3. **Set the WASH TIMER 2~3minutes.**
4. **Drain the water. Set the CYCLE SELECTOR / DRAIN SELECTOR KNOB to 'DRAIN'**
5. **Repeat this cycle until drain water is clean. (2~3 cycles)**
6. **Be sure lay the drain hose down.**

OVER FLOW RINSE

1. **Keep suppling water**

Adjust water pressure to ensure that the amount of water supplied does not exceed that water drained.



2. **Set the WASH TIMER 6~8 minutes.**



3. **As soon as the WASH TIMER shuts off, turn off the water tap.**

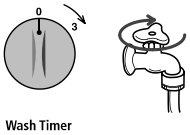

4. **Set the CYCLE SELECTOR / DRAIN SELECTOR KNOB to 'DRAIN'**



ADDITIONAL RINSE

After rinsing you can select this course for more effective rinse (Don't select only this course for rinse.)

1 Load the laundry evenly into the spin basket.

2 Set the WATER SELECTOR KNOB to SPIN (a) and CYCLE SELECTOR / DRAIN SELECTOR KNOB to 'DRAIN'(b).



3 Supply water for about 1 minute. **Adjust the water flow to prevent overflow from the wash tub.**



4 After stopping water supply, cover the laundry with safety cover and close the inner lid.

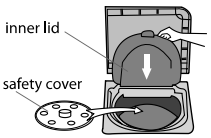

5 Close the spin dryer lid.

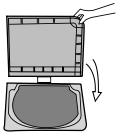

6 Set the SPIN DRY TIMER 2~3 minutes.

LAUNDRY GUIDE

WASHING TIME

KINDS OF CLOTHING	WASHING TIME	WASHING SELECTION
Extremely soiled heavy fabric	10 to15minutes	HEAVY / INTENSIVE
Linen,cotton,etc.	8 to10minutes	
Ordinary clothes (underwear,etc)	7minutes	NORMAL / DELICATE
Slightly soiled synthetic fiber	2 to 5minutes	
100%wool,mixed wool knitting, thin synthetic fiber with tags indicating hand washing	2 to 5minutes	

SPIN DRY TIME

TIME	TYPE OF LAUNDRY
1 min.	Thin(synthetic fiber)
1~2 min.	wool
3~5 min.	cotton
5 min.	thick(cotton)
10 min. (Air Turbo)	thick(cotton)

DETERGENT

AMOUNT OF DETERGENT	WATER LEVEL
37 g	Low (37 *l*)
45 g	Mid (45 *l*)
54 g	High (54 *l*)

The amount of detergent is average.
Follow the instruction detergent printed on the package for amount of detergent.
Choose the amount of detergent depending on the fabric type.

MAINTENANCE

WHEN YOU LOAD THE LAUNDRY INTO THE SPIN BASKET.

Press the laundry evenly and put the safety cover into the spin basket drum as shown in the figure.

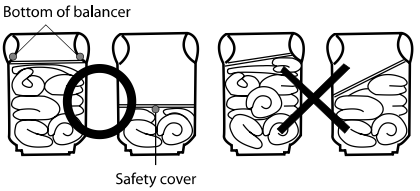

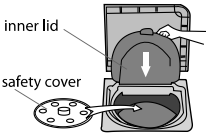

TO PICK OUT THE CLOTHING WHICH HAS FALLEN BETWEEN THE BASKET AND TUB.

For safety, pull the power supply plug out of the socket.

1. Disassemble a screws from the spin dryer hatch.
2. The spin dryer hatch is fixed to the brim by the concave and convex parts at two places. Expand the concave and convex parts, and pull up the spin dryer hatch to remove it.
3. Remove the clothing
4. Close the spin dryer hatch.
   Push the hatch firmly until the catch at the front is engaged securely.

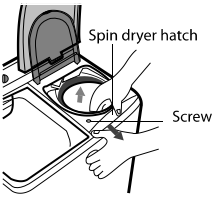

TROUBLE SHOOTING

TROUBLE	CHECK POINT	TROUBLE	CHECK POINT
1. The washer does not work.	Check that the power cord is connected to a power outlet well. Power stoppage?	**5. The spin dryer basket will not run.**	Is the spin dryer lid closed completely? Are laundry (socks,etc.) falling out of the spin dryer basket and clinging to the axle? ☛ See "To pick out..." on page 8.
2. Clothes will not move freely.	Is the laundry overloaded?	**6. The water drains out immediately.**	Is the Cycle Selector / Drain Selector set to drain? Is the drain hose clogged with scrap? ☛ Hang up drain hose over the drain hose hook. Half fill the wash tub with the water and try for drain again.(Scrab will be removed by water drain pressure.)
3. Incomplete spinning. (Severe vibration or unbalance.)	Are the laundry arranged evenly? ☛ See "When you load..." on page 8.		
4. Water does not drain.	- Be sure lay the drain hose down. ☛ See "Before using..." on page 2.	**7. Pulsator not moving**	- Although the machine may stay still, maximum 5 minutes. If the WASH TIMER indicates in excess of 15 minutes. It is just in the process of soaking and not a breakdown.

SPECIFICATION

MODELS	WT8202	WT8204/WT8205/WT8207AG	WT8504/WT8505/WT8507AG	WT9204/WT9205/WT9207AG
DIMENSIONS (WxDxH)	776x434x900mm	776x434x930mm	799x489x965mm	820x504x1020mm
WATER PRESSURE	0.05~0.3MPa	0.05~0.3MPa	0.05~0.3MPa	0.05~0.3MPa
	(0.5~3.0kg.f/cm2)	(0.5~3.0kg.f/cm2)	(0.5~3.0kg.f/cm2)	(0.5~3.0kg.f/cm2)
WEIGHT	24.5 kg	25.5 kg	26.5 kg	30.0 kg
STANDARD QUANTITY OF WATER	50/	50/	55/	65/
RATING TIME	Washing 1 Hour/ Spinning 15 minutes	Washing 1 Hour/ Spinning 15 minutes	Washing 1 Hour/ Spinning 15 minutes	Washing 1 Hour/ Spinning 15 minutes

Samsung strives to improve its products at all times.
Both the design specifications and these user instructions are thus subject to change without notice.

Contact SAMSUNG WORLD WIDE
If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care centre.

Country	Customer Care Center ☎	Web Site
AUSTRALIA	1300 362 603	www.samsung.com/au
INDIA	3030 8282, 1600 1100 11	www.samsung.com/in
MALAYSIA	1800-88-9999	www.samsung.com/my
PHILIPPINES	1800-10-SAMSUNG (7267864)	www.samsung.com/ph
RUSSIA	8-800-200-0400	www.samsung.ru
SINGAPORE	1800-SAMSUNG (7267864)	www.samsung.com/sg
SOUTH AFRICA	0860 7267864 (SAMSUNG)	www.samsung.com/za
VIETNAM	1 800 588 889	www.samsung.com/vn

SAMSUNG

उपभोक्ता निर्देशिका

WT8202EG
WT8204EG
WT8205EG
WT8207AG
WT8504EG
WT8505EG
WT8507AG
WT9204EG
WT9205EG
WT9207AG

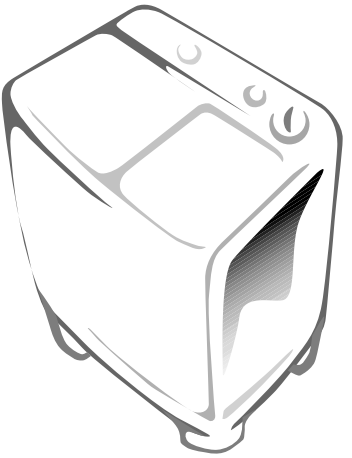

वाशिंग मशीन का इस्तेमाल करने से पहले उपभोक्ता निर्देशिका को ध्यान से पढ़ें और भविष्य के लिए सँभाल कर रखें।

विशिष्ट पद्धतियाँ 1
सुरक्षा निर्देश 2
सतर्कता 2
चलाते समय सावधानियाँ 2
विभिन्न भागों का विवरण 3
कन्ट्रोल पैनल 4
संस्थापना 5
पर्यावयरण 5
निकास नली को जोड़ना 5
मशीन की सफाई 5
फिल्टर को कैसे साफ करें 5
कपड़े धोने की विधि 6
धोना 6
सुखाना 6
खँगालना 7
ओवर फ्लो रिन्स 7
अतिरिक्त खंगालना 7
धुलाई निर्देशिका 8
रखरखाव 8
समस्या का समाधान 9
विशेषताएं 9

Register your product at
www.samsung.com/global/register

CODE NO. : DC68-01783E

विशिष्ट पद्धतियाँ

- **सिल्वर वाश पद्धति**
  - यह एक धुलाई नियन्त्रण पद्धति है जो मनुष्य त्वचा की चाँदी की प्रतिरोधक परत द्वारा हानिकारक कीटाणुओं से बचाव/सुरक्षा करती है, और जिससे सुखद एवं स्वास्थ्यप्रद सफाई का अहसास होता है। यह पद्धति धुले हुए कपड़ों पर प्रतिरोधक परत के द्वारा कीटाणुओं के विस्तार को रोकती है।

    परीक्षण प्रणाली :
    कीटाणु रहित वस्त्रों के लिए KS K 0693 परीक्षण प्रणाली।

- **एयर टर्बो सुखाने की पद्धति**
  - एयर टर्बो तकनीकी से स्पिनिंग मजबूत और तेज होती है जिससे कपड़े सुखाने में बहुत कम समय लगता है
  - टाइम सेविंग एयर टर्बो से समय की बचत होती है और कपड़े भी लाईन ड्रॉइंग के मुकाबले ३०:४०: जल्दी सूखते हैं। विशेष रूप से बारिश के मौसम में और बहुत ज्यादा नमी के मौसम में, ऐसे कपड़े जिन्हें सुखाने में कई दिन लगत जाते हैं; जैसे भारी जीन्स, भारी स्वेटर्स और मोटे कम्बल भी और तेजी से सूख जाते हैं।
  - इजी टु आयरन एयर टर्बो नाजुक और सिन्थेटिक कपड़ों के लिए एकदम उपयुक्त है। ज्यादा देर तक लटका कर इंतजार नहीं करना पड़ता। मशीन से निकालकर कपड़े सीधा आयरन कर सकते हैं क्योंकि एयर टर्बो कपड़ों की अधिकतर नमी निकाल देती है और आयरन करने के लिए उपयुक्त नमी छोड़ती है।

- **पारदर्शक विन्डो**
  - यह पारदर्शक विन्डो एक नवीन विचारधारा है जो कपड़े धोने वाले की मशीन के चलते समय अन्दर देखने की उत्सुकता का समाधान करती है।
    मशीन के चलते समय पारदर्शक विन्डो में से देखकर धोए जा रहे कपड़ों की स्थिति को जाँच सकते हैं।

- **डबल स्टॉर्म पल्सेटर**
  - आन्तरिक और बाहरी ब्लेडों को विभिन्न रफ्तारों पर घुमाने से उत्पन्न दो शक्तिशाली धाराएं यह निश्चित करती हैं कि कपड़े आम वाशिंग मशीन के मुकाबले कम क्षति के साथ साफ होते हैं। टर्नेडो पानी की धारा की तरह धुलाई एवं खंगाल दोनों की शक्ति को बढ़ाता है जबकि आपके कपड़ों में सिकुड़न और गाँठ लगने को रोककर अनावश्यक घर्षण को कम करता है और आपके हल्के कपड़ों की स्थिरता एवं निर्भरता को बढ़ाता है।

सुरक्षा निर्देश

- असम्भावित खतरे और नुकसान से बचने के लिए सुरक्षा का उचित ध्यान रखते हुए अवश्य ही सतर्कता और सावधानियों का अनुसरण करें।

सतर्कता

- **मशीन का भूसंपर्क करना न भूलें।**
  विद्युत के झटके से बचने के लिए, धातु के पाइप से भूसंपर्क करें। लेकिन विस्फोट के खतरे या विद्युत की चमक को रोकने के लिए गैस पाइप या टेलीफोन की तार से भूसंपर्क न करें।



- **स्पिनिंग के समय अपने हाथों को स्पिन ड्रायर बास्केट के अन्दर न डालें।**
  आपकी अंगुलियाँ स्पिनिंग होते हुए कपड़ों में उलझ कर जख्मी हो सकती हैं।

- **बच्चों को मशीन के चलाने या उसके साथ खेलने की कभी भी अनुमति न दें।**
  मशीन के साथ खेलते हुए बच्चे अचानक वाशिंग टब में गिर सकते हैं।

- **जब मशीन इस्तेमाल में न हो, तो विद्युत की तार को विद्युत आपूर्ति से अलग कर दें।**
- **जब मशीन कार्पेट बिछे हुए फर्श पर लगाई गई हो तो हवा के आवागमन वाले छिद्र में कार्पेट द्वारा कोई रुकावट नहीं होनी चाहिए।**
- **यदि इस मशीन की विद्युत आपूर्ति वाली डोरी खराब है, तो उसे निर्माता द्वारा नियुक्त मरम्मत करने वाली शॉप द्वारा ही बदलें क्यों विशेष उद्देश्य के लिए विशेष सामग्री ही चाहिए।**
- **ओवरफिलिंग और उसके नुकसान से बचने के लिए मौजूद ऑपरेटर द्वारा केवल परिमित जल आपूर्ति दाब पर ही भरा जाना चाहिए।**
- **यदि वाशिंग मशीन में हवा के आवागमन वाले छिद्र नीचे की तरफ हैं तो वे कार्पेट द्वारा अवरुद्ध नहीं होने चाहिए।**
- **मशीन में विद्युत आपूर्ति के लिए अडेप्टर या एक्सटेंशन कोर्ड का इस्तेमाल न करें।**

चलाते समय सावधानियाँ

- **अतिशय गरम पानी का उपयोग न करें (50°C या अधिकतर)**
  प्लास्टिक भागों के विकृत या क्षतिग्रस्त होने की सम्भावना है। कपड़े भी विकृत या बदरंग हो सकते हैं।
- **कपड़े धोने से पहले सभी जेबों की जाँच कर लें।**
  जेबों में रखी हुई कील या पिन मशनी या कपड़ों को नुकसान पहुँचा सकती हैं।
- **यदि पानी का दाब बहुत ज्यादा है, तो वाटर टेप को थोड़ा सा बंद कर लें।**
- **पानी के बिखरने को रोकने के लिए वॉश टब के ढक्कन को बन्द कर दें।**
- **कन्ट्रोल पैनल पर पानी कभी नहीं गिरने दें।**
- पॉकेट से अपनी सभी व्यक्तिगत वस्तुओं को निकाल लें।
  सतर्कता
  सभी जेबों की जाँच कर लें ! बालों की पिन और सिक्के आपके कपड़ों या मशीन को नुकसान पहुँचा सकते हैं। वे आवाज करते हैं और मशीन में समस्या पैदा कर सकते हैं। जेबों की जाँच अवश्य करें।

- **स्पिनिंग से पहले निश्चित कर लें कि कपड़ों को इनर कवर से ढक दिया है।**
  यह कपड़ों को बाहर निकलने और क्षतिग्रस्त होने से रोकता है।



- **ड्रेन हॉज को नीचे रखने का ध्यान रखें।**



विभिन्न भागों का विवरण

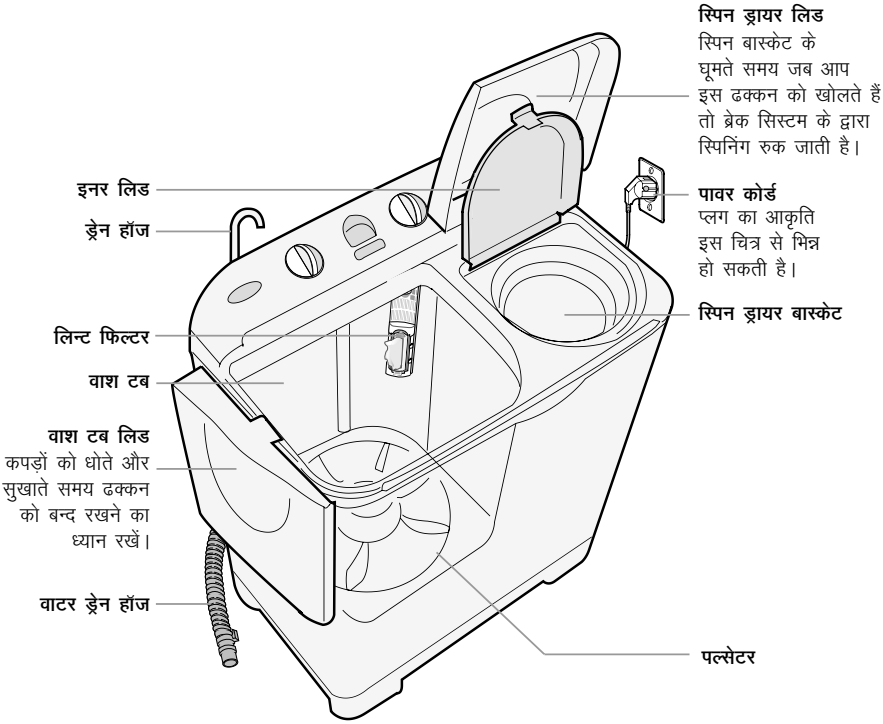
स्पिन ड्रायर लिड
स्पिन बास्केट के घूमते समय जब आप इस ढक्कन को खोलते हैं तो ब्रेक सिस्टम के द्वारा स्पिनिंग रुक जाती है।
इनर लिड
ड्रेन हॉज
पावर कोर्ड
प्लग का आकृति इस चित्र से भिन्न हो सकती है।
स्पिन ड्रायर बास्केट
लिन्ट फिल्टर
वाश टब
वाश टब लिड
कपड़ों को धोते और सुखाते समय ढक्कन को बन्द रखने का ध्यान रखें।
वाटर ड्रेन हॉज
पल्सेटर

(कृपया इस आकृति को अपने मॉडल के साथ न मिलायें क्योंकि हो सकता है कि यह आपके मॉडल के समान न हो)

कन्ट्रोल पैनल

1. वाश सलेक्टर
यह धुलाई क्रिया चयन के लिये इस्तेमाल होता है।

2. वाश टाइमर
यह धुलाई के समय को निश्चित करने के लिए होता है।
1-15 मिनट
1-35 मिनट
1-42 मिनट

3. साईकिल सलेक्टर/ड्रेन सलेक्टर
यह धुलाई, खंगालने और पानी के निकास के लिए इस्तेमाल होता है।

4. स्पिन ड्रायर टाइमर
यह स्पिन समय निश्चित करने के लिए इस्तेमाल होता है।
1-5 मिनट
1-10 मिनट

5. वाटर सलेक्टर
धुलाई के दौरान, वाटर सलेक्टर नोब वाश की तरफ होनी चाहिए। स्पिन के दौरान, वाटर सलेक्टर नोब स्पिन की तरफ होनी चाहिए।

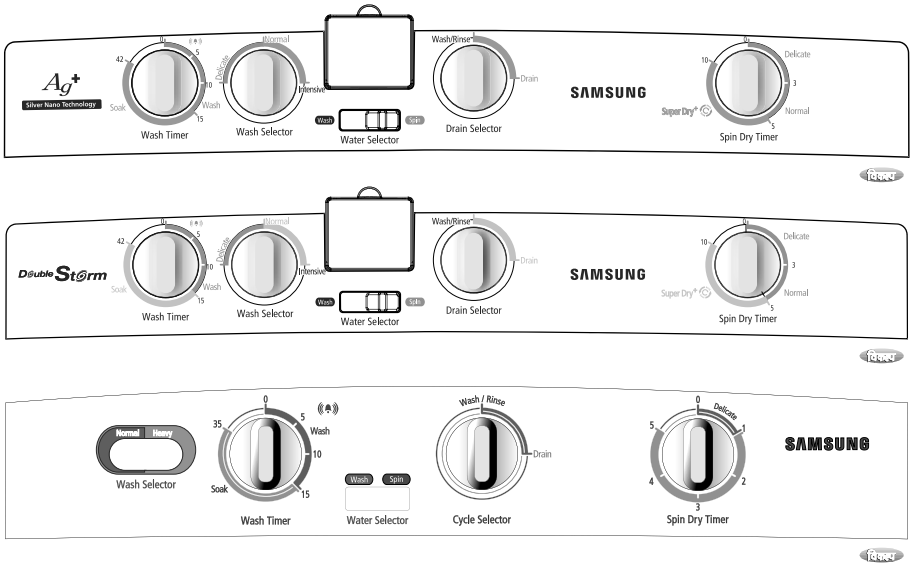

संस्थापन

पर्यावरण

कुछ जगह छोड़ें

मशीन तथा दीवार के बीच में कम से 15 से.मी. की जगह छोड़ें

मशीन को दृढ़ समतल सतह पर रखें

मशीन को असमतल या कमजोर सतह पर रखने से मशीन में शोर या कम्पन्न हो सकता है।
(2° कोण तक असमानता मान्य है)

मशीन को पानी के पास कभी न लगायें

मशीन को वाष्पित कमरे या बारिश से सीधे सम्पर्क वाले स्थान पर न रखें। आर्द्रता से बिजली के उपकरणों को क्षति अथवा बिजली का झटका लगने का डर हो सकता है।

सूर्य के सीधे प्रकाश अथवा गर्म उपकरणों से मशीन को दूर रखें

क्योंकि प्लास्टिक और विद्युत उपकरण सीधी गर्मी से प्रभावित होते हैं, इसलिए मशीन को हीटर, बॉइलर्स इत्यादि के पास कभी नहीं रखें।

मशीन को सूर्य के सीधे प्रकाश में न रखें।

निकास नली को जोड़ना

निकास नली (a) को लगाएं और उसे तीर की दिशा में मजबूती से धकेलें जिससे वह जुड़ जाए।

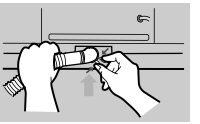

- इसे ड्रेन आउटलेट के नीचे की ओर जोर लगाकर धकेलें।
- ड्रेन हॉज की जाँच कर लें कि वह खींचने पर आउटलेट से अलग तो नहीं हो रहा।

मशीन की सफाई

लिंट फिल्टर की सफाई

यदि धुलाई के बाद लिंट फिल्टर में गंदगी जमा हो गई हो तो चित्र में दिखाये गए तरीके से नीचे दबाकर वाहर की तरफ खींच कर निकालें।
फिल्टर नेट में जमा गंदगी को हटाएं और साफ करें।

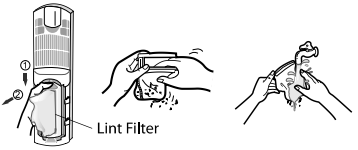

ओवरफ्लो फिल्टर

ओवरफ्लो फिल्टर के ऊपरी हिस्से को दो उंगलियों की सहायता से 'A' छेद में डालकर (चित्र के अनुसार) खींचें।



वाश टब की सफाई

- केबिनेट और ऑपरेशन पैनल के ऊपर धब्बों को मुलायम कपड़े से पोंछें।
किसी भी प्रकार के बैंजीन, थिनर, क्लींजर या वैक्स का प्रयोग न करें और न ही मशीन को ब्रुश से रगड़ें।
रंगीन सतह या प्लास्टिक के पुर्जे खराब हो जायेंगे।
- सफाई करते समय पानी मशीन के पुर्जों पर सीधे न छिड़कें, यह मशीन की कार्यावधि को कम कर सकता है। इससे बिजली के झटके या आग लगने की भी संभावना हो सकती है।

कपड़े धोने की विधि

धोना

1. धुलाई से पूर्व निम्नलिखित निर्देशों को जाँच लें;

- जल आपूर्ति हॉज को जोड़कर नल चला दें।
- विद्युत तार को विद्युत आपूर्ति आउटलैट से जोड़ें।
- पानी की निकास हॉज को नाली की तरफ नीचे कर दें।



2. वाश सलेक्टर नोब को एच्छिक मोड पर सैट करें।

Wash Selector



Wash Selector

3. साईकिल सलेक्टर/ड्रेन सलेक्टर नोब वाश•रिन्स पर सैट करें।



Cycle Selector / Drain Selector

4. वाटर सलेक्टर नोब को वाश पर सेट करें।



5. वाश टब में कपड़े डालें

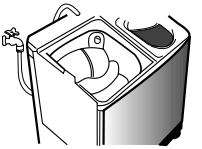

6. वाश टब में पानी भरें तथा डिटर्जेंट डालें।

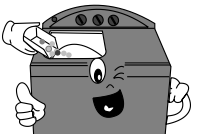

7. कपड़े धोने की अवधि का चयन करें।



Wash Timer



Wash Timer



Wash Timer

कपड़े धोने की अवधि का चयन करें 1-15 मिनट

कपड़े धोने की अवधि का चयन करें 1-35 मिनट
(भिगोने के लिए वाश टाइमर 15 से 35 मिनट के मध्य किसी बिन्दु पर सैट करें)

भिगोने की प्रक्रिया

अगर वाश टाइमर "15" से "35" के बीच में रखते हैं तो वाशिंग मशीन भिगोने (2-29) की प्रक्रिया के पूरा होने पर धुलाई शुरू कर देती है (15 मिनट)।
भिगोने की प्रक्रिया (20 मिनट) में 3 बार कपड़े 1.5-2.0 के लिये घुमाती है और 5 निनट के लिये स्थिर रहते हैं।

कपड़े धोने की अवधि का चयन करें 1-42 मिनट
(भिगोने के लिए वाश टाइमर 15 से 42 मिनट के मध्य किसी बिन्दु पर सैट करें)

भिगोने की प्रक्रिया

अगर वाश टाइमर "15" से "42" के बीच में रखते हैं तो वाशिंग मशीन भिगोने (26.5 मिनट) की प्रक्रिया के पूरा होने पर धुलाई शुरू कर देती है (15 मिनट)।
भिगोने की प्रक्रिया (26.6 मिनट) में 4 बार कपड़े 1.5-2.0 के लिये घुमाती है और 5 मिनट के लिये स्थिर रहते हैं।

8. धुलाई के पश्चात् साईकिल सलेक्टर/ड्रेन सलेक्टर नोब को पानी निकालने के लिये ड्रेन पर सैट करें।



Cycle Selector / Drain Selector

स्पिन ड्राई

1. कपड़ों को स्पिन बास्केट में अलग-अलग करके समतल डाल दें।

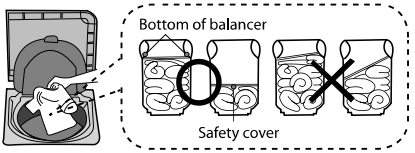

2. सेफ्टी कवर लगाना न भूलें तथा अंदर वाली लिड को बंद कर दें।

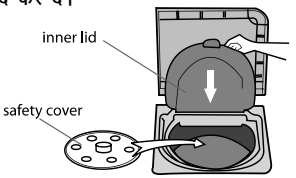

3. स्पिन ड्रायर लिड को बंद कर दें

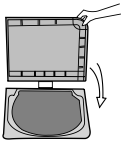

4 कपड़े सुखाने की अवधि का चयन करें

स्पिन ड्राई टाइमर को 1 से 5 निमट पर सैट करें।

Spin Dry Timer

स्पिन ड्राई टाइमर को 1 से 10 निमट पर सैट करें।

Spin Dry Timer

5. अधूरी स्पिनिंग (खतरनाक कंपन या अस्थिरता)
.... पेज 8 पर देखें

खंगालना

1. साईकिल सलेक्टर/ड्रेन सलेक्टर नोब को 'वाश•रिन्स' पर सैट करें।



2. वाश टब में पानी की उचित मात्रा डालें जिससे पानी टब के ऊपर से बाहर न निकले।



3. वाश टाइमर को (2-3 मिनट) के लिए सैट करें।
4. पानी निकालें। साईकिल सलेक्टर/ड्रेन सलेक्टर नोब को 'ड्रेन' पर सैट करें।
5. ऊपर दी गई प्रक्रिया को तब तक दोहरायें जब तक कि साफ पानी निकलना न शुरू हो जाये (2-3 बार)
6. पानी निकास हॉज को नीचे रखना न भूलें।

ओवरफ्लो रिन्स

1. पानी डालते रहें

पानी के प्रेशर को इस तरह सैट करें ताकि पानी की मात्रा निकलने वाले पानी से ज्यादा न हो।



2. वाश टाइमर को 6 से 8 मिनट पर सैट करें।



3. जैसे ही वाश टाइमर बंद हो, पानी के नल को भी बंदकर दें।

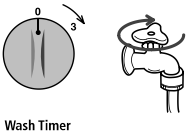

4. साईकिल सलेक्टर/ड्रेन सलेक्टर नोब को 'ड्रेन' पर सैट करें।



अतिरिक्त खंगालना

खंगालने की प्रक्रिया के बाद आप इस विधि का चुनाव ज्यादा प्रभाव खालने के लिए कर सकते हैं। (खंगालने के लिए सिर्फ इस विधि का चुनाव न करें।

1 स्पिन बास्केट में कपड़ों को समान रूप से लगाएं।

2 वाटर सलेक्टर नोब को स्पिन (a) पर तथा साईकिल सलेक्टर/ड्रेन सलेक्टर नोब को ड्रेन (b) पर सैट करें।

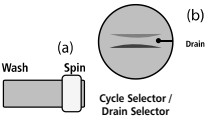

3 लगभग 1 मिनट तक पानी डालें। **पानी के स्तर को इस प्रकार सैट करें कि पानी वाश टब से बाहर न निकले।**

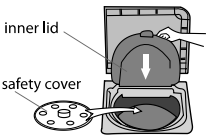

4 पानी की सप्लाई बंद करने के बाद, कपड़ों को सुरक्षा कवर से ढ़क दें तथा इनर लिड को बंद कर दें।

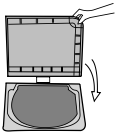

5 स्पिन ड्रायर लिड को बंद कर दें।

6 स्पिन ड्राई टाइमर को 2 से 3 मिनट के लिए सैट करें।

धुलाई निर्देशिका

धोने का समय

कपड़ों की किस्म	धुलाई का समय	धुलाई का चयन
अत्यधिक गन्दे भारी कपड़े	10-15 मिनट	भारी/ इंटेंसिव
लाइनन, कॉटन इत्यादि	8-10 मिनट	
साधारण कपड़े (अण्डरवियर इत्यादि)	7 मिनट	सामान्य/ नाजुक
कम गन्दे सिन्थैटिक कपड़े	2-5 मिनट	
100% ऊनी, मिश्रित ऊनी, एवं पतले सिन्थैटिक कपड़े जिन पर हस्त धुलाई का टैग लगा हो	2-5 मिनट	

स्पिन ड्राई का समय

समय	कपड़ों की किस्म
1 मिनट	पतले सिन्थैटिक कपड़े
1-2 मिनट	ऊनी कपड़े
3-5 मिनट	सूती कपड़े
5 मिनट	मोटे सूती कपड़े
10 मिनट (एअर टर्बो)	मोटे सूती कपड़े

डिटर्जेन्ट

डिटर्जेन्ट की मात्रा	पानी का स्तर
37 ग्राम	कम (37 *l*)
45 ग्राम	मध्यम (45 *l*)
54 ग्राम	ज्यादा (54 *l*)

डिटर्जेन्ट की मात्रा उसके पैकेट के ऊपर दिए गये निर्देश के अनुसार ही करें।
डिटर्जेन्ट की मात्रा का चयन कपड़ों की किस्म के आधार पर करें।

रख-रखाव

जब आप कपड़ों को सुखाने के लिए 'स्पिन बास्केट' में डालते हैं।

चित्रानुसार कपड़ों को स्पिन बास्केट ड्रम में समान रूप से फैला दें और सुरक्षा ढक्कन को अच्छी तरह बंद कर दें।

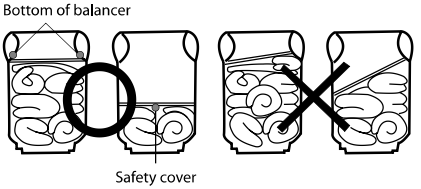

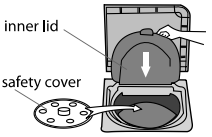

बास्केट और टब के बीच में गिरे हुए कपड़ों को निकालना :-

सुरक्षा हेतु पावर प्लग को सॉकेट से अलग कर दें।

1. स्पिन ड्रायर कवर के पेचों को अलग कर दें।
2. स्पिन ड्रायर कवर किनारे के साथ एक उत्तल एवं अवतल छल्ले द्वारा दो जगह जुड़ा होता है। उत्तल एवं अवतल भागों को फैलाकर स्पिन ड्रायर को ऊपर खींचकर अलग कर दें।
3. फँसे हुए कपड़ों को बाहर निकालें।
4. स्पिन ड्रायर कवर को बंद कर दें।
   कवर को मजबूती से दबाते रहें जब तक कवर अग्र भाग में ठीक से जुड़ न हो जाए।

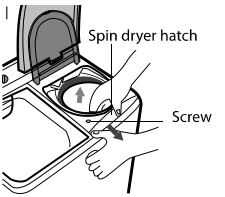

समस्या का समाधान

समस्या	समाधान	समस्या	समाधान
1. वाशिंग मशीन काम नहीं कर रही है।	जाँच लें कि क्या विद्युत तार पावर आउटलेट के साथ ठीक से जुड़ा हुआ है? क्या पावर रुकी हुई है?	**5. स्पिन ड्रायर बास्केट नहीं घूम रही है।**	जाँच लें कि क्या स्पिन ड्रायर का ढक्कन ठीक से बंद है या नहीं। क्या कपड़े (जुराब इत्यादि) स्पिन ड्रायर बास्केट से गिरकर एक्सल में फँस गये हैं ☛ See "To pick out..." on page 8.
2. कपड़े आसानी से नहीं घूम रहे हैं।	मशीन में अत्यधिक कपड़े न डालें।	**6. पानी तुरन्त ही निकल जाता है।**	क्या साईकिल सलेक्टर/ड्रेन सलेक्टर 'ड्रेन' पर सैट किया है? क्या ड्रेन हॉज गंदगी से अवरुद्ध हो गया है? ☛ ड्रेन हॉज को ड्रेन हॉज के हुक पर टाँग दें। वाश टब में आधा पानी भरें और दुबारा निकालने का प्रयास करें। (पानी के प्रैशर से गंदगी दूर हो जायेगी)
3. अधूरी स्पिनिंग (खतरनाक कम्पन या असन्तुलन)	कपड़े समान रूप से फैलायें। ☛ See "When you load..." on page 8.		
4. पानी नहीं निकल रहा है।	ड्रेन हॉज को नीचे की तरफ रखना न भूलें। ☛ See "Before using..." on page 2.	**7. पल्सेटर नहीं घूम रहा है।**	वाश टाइमर को 15 मिनट पर सैट करने पर भी अगर मशीन 5 मिनट लगाती है तो यह कोई तकनीकी खराबी नहीं है।

विशेषताएँ

मॉडल	WT8202	WT8204/WT8205/WT8207AG	WT8504/WT8505/WT8507AG	WT9204/WT9205/WT9207AG
आकार (चौ०x ग०x उँ०)	**776x434x900** मिमि०	**776x434x930** मिमि०	**799x489x965** मिमि०	**820x504x1020** मिमि०
पानी का दबाव	**0.05~0.3MPa**	**0.05~0.3MPa**	**0.05~0.3MPa**	**0.05~0.3MPa**
	(0.5~3.0kg.f/cm2)	**(0.5~3.0kg.f/cm2)**	**(0.5~3.0kg.f/cm2)**	**(0.5~3.0kg.f/cm2)**
भार (नैट)	**24.5** किलो ग्राम	**25.5** किलो ग्राम	**26.5** किलो ग्राम	**30.0** किलो ग्राम
जल की मात्रा	**50** लीटर	**50** लीटर	**55** लीटर	**65** लीटर
निर्धारित समय	धुलाई 1 घण्टा	धुलाई 1 घण्टा	धुलाई 1 घण्टा	धुलाई 1 घण्टा
	सुखाना 15 मिनट	सुखाना 15 मिनट	सुखाना 15 मिनट	सुखाना 15 मिनट

सैमसंग हमेशा अपने उत्पादकों को सुधारने की कोशिश में रहता है। अतः विशेषतायें तथा ये उपभोक्ता निर्देशिका बिना किसी पूर्व सूचना के बदल सकती हैं।

Contact SAMSUNG WORLD WIDE

यदि सैमसंग के उत्पादों के संदर्भ में आपकी कोई सवाल या टिप्पणी है तो कृपया सैमसंग के ग्राहक सेवा केन्द्र से संपर्क करें।

Country	Customer Care Center ☎	Web Site
आस्ट्रेलिया	1300 362 603	www.samsung.com/au
भारत	3030 8282, 1600 1100 11	www.samsung.com/in
मलेशिया	1800-88-9999	www.samsung.com/my
फिलीपीन्स	1800-10-SAMSUNG (7267864)	www.samsung.com/ph
रूस	8-800-200-0400	www.samsung.ru
सिंगापुर	1800-SAMSUNG (7267864)	www.samsung.com/sg
दक्षिणी अफ्रीका	0860 7267864 (SAMSUNG)	www.samsung.com/za
वियतनाम	1 800 588 889	www.samsung.com/vn